


Motor cruiser

APPLICABLE PRODUCTS: B921, B922, B923, B924

This is a general guide to show you how simple it is to install an em-trak AIS transceiver. If you have any questions at any time you can contact our team support@em-trak.com

- AIS starts up automatically every time engine starts or when power is switched on.
- Wireless connection to your phone and any other display device such as chart plotter.
- See all AIS targets and vessel info.

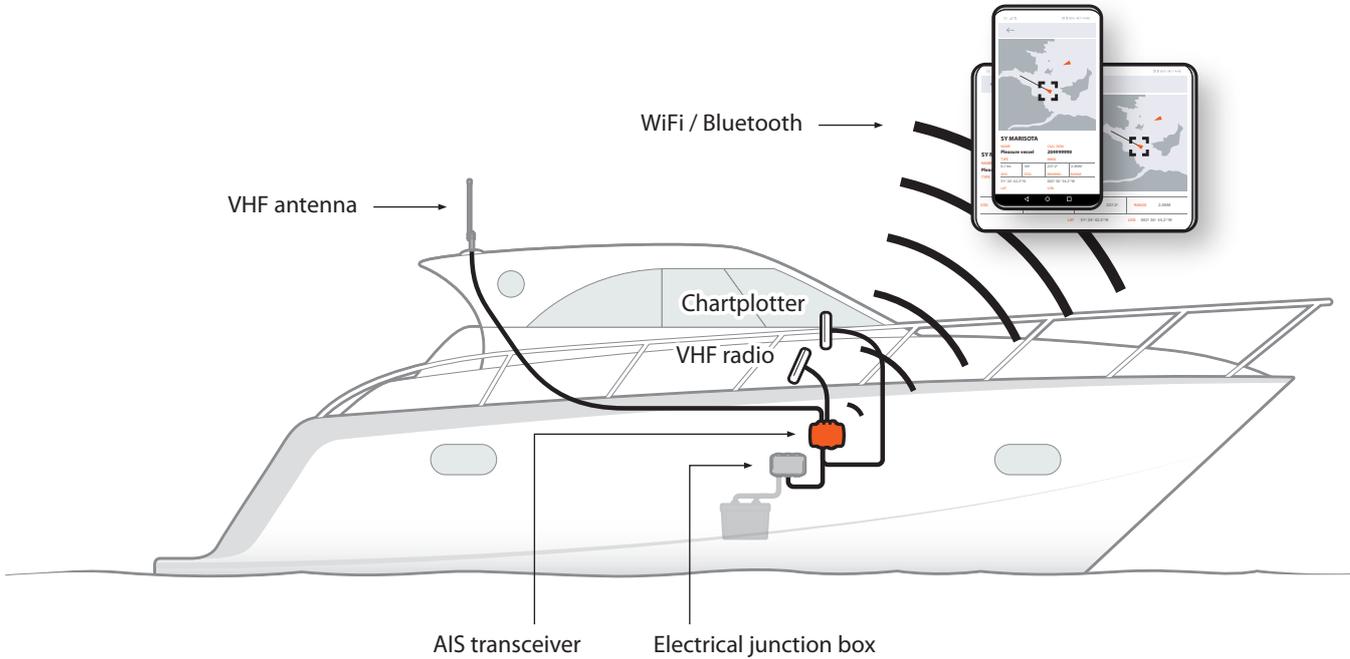

1

No screws required!

Use bracket to fit AIS into convenient storage / utility area.

2

Connect to your VHF radio, VHF antenna and power.

AIS has internal GPS antenna. Therefore an external GPS antenna is optional if AIS is installed directly under a thin deck or next to the window. If not possible an external GPS antenna will be required.

VHF antenna

VHF radio

GPS antenna (Optional)

AIS transceiver

Chartplotter

NMEA0183 & 2000

+/-

Existing Power System Fuse/Junc Box

3

Switch power on and use **CONNECT-AIS** app or **PROAIS2** PC Software to program AIS with your vessel information.

WiFi / Bluetooth

em-trak CONNECT-AIS

AIS transceiver

NMEA0183 & 2000

+/-

Smartphone / Wireless display device

CONNECT-AIS

4

See AIS targets and information on your chartplotter, smart phone and other wireless devices.

WiFi / Bluetooth

Chartplotter